

Benefits

RENTAL REIMBURSEMENT

Reimbursement is provided at \$50.00 per 24 hour period, for a maximum of 7 days per occurrence when your vehicle is undergoing a covered repair, not to exceed \$350.00.

TOWING REIMBURSEMENT

Reimbursement for towing expenses up to a maximum of \$300.00 while your vehicle is undergoing a covered repair.

Features

NATIONWIDE PROTECTION

Coverage provided throughout the continental United States, Alaska, Hawaii and Canada.

FAST CLAIM PAYMENT

Nationwide credit card payment for covered repairs.



Administered by:

**Phoenix American
Warranty Company, Inc.**

6303 Blue Lagoon Drive
Suite 225
Miami, FL 33126

(800) 901-6183

FL License #60050

www.phoenixec.com

AIRSTREAM

CERTIFIED
PRE-OWNED

LIMITED WARRANTY

AIRSTREAM



©2016 All rights reserved.

0P0222

TOURING COACH

Note: This is not a contract and the contents of this brochure are limited by its size. The contract is the Airstream Certified Pre-Owned Limited Warranty and all benefits described are subject to the terms of said contract. Remanufactured or used parts may be used in certain instances.

1. Engine

All Internally Lubricated Parts, Including: and Camshaft and Bearings; Connecting Rods and Bearings; Crankshaft and Main Bearings; Cylinder Heads; Engine Mounts; Fly Wheel; Harmonic Balancer; Hydraulic and Solid Lifters; Intake and Exhaust Manifold; Intake and Exhaust Valves; Metal Valve Covers; Oil Pan; Oil Pump and Oil Pump Housing; Pistons; Piston Rings; Push Rods; Rocker Arms; Rocker Arm Shafts; Tensioners/Guides; Timing Chain or Belt; Timing Gears; Timing Gear Cover; Vacuum Pump; Valve Guides; Valve Springs; Water Pump; and Engine Block*.

2. Diesel Engine (If Equipped)

Engine: All covered engine parts shown under "Engine" component plus Fuel Injectors (Except For Contamination); Fuel Heater; and Fuel Injection Pump.

Turbocharger: All Internally Lubricated Parts contained within the Turbocharger Housing; Intercooler; Waste Gate; and Turbocharger Housing*.

3. Transmission

All Internal Parts; Mounts; Cooler and Metal Cooler Lines; Torque Converter; Filler Tube and Dipstick; Torque Pans and Cases*; Transmission Park Brake Assembly; and Vacuum Modulator.

4. Air Conditioning

Accumulator; Blower Motor; Clutch; Clutch Coils; Clutch Pulley; Compressor; Condenser; Ducts; Evaporator; High/Low Cut Off Switches; Idle Pulley and Bearing; Orifice Tube; PC Boards; Pressure Cycling Switch; Receiver-Dryer; and Temperature Control Programmer.

5. Brakes

Backing Plate; Clips, Springs and Retainers; Combination Valves; Disc Calipers; Drums; Hydraulic Control Unit; Master Cylinder; Metal Lines and Fittings; Parking Brake Linkage and Cables (Excluding Transmission Mounted Parking Brake); Power Assist Booster; Power Brake Cylinder; Rear Actuators; Treadle Valve; Self-Adjusters; and Wheel Cylinders.

6. Chassis Frame (Metal Only)

7. Drive Axle Assembly (Front and Rear)

All Internally Lubricated Parts Contained within the Differential Housing, Transaxle Housing, and Final Drive Housing; Axle Shafts; Constant Velocity Joints; Drive Shafts; Hub Bearings; Retainers; Supports; Universal Joints; Differential Housing*; Final Drive Housing*; and Transaxle Housing*.

8. Electrical

Alternator; Back Up Alarm; Coils; Cruise Control Transducers, Electronic Engine Timing Control Unit and Sensors; Engagement Switch, and Servo; Dashboard Clock; Distributor; Dual Battery Paralleling Switch; Engine Wiring Harness; Front Wiper Motors; Gauges; Manually Operated Switches; Power Antenna Motors; Power Door Locks; Relays; Remote Control Mirror Motors; Seat Motors; Solenoids; Starter; Turn Signal Switch; Voltage Regulator; and Window Motors and Controls.

9. Electronics

Electronic Anti-Detonation Sensors and Controller; Electronic Anti-Lock Brake System (ABS) and Relays; Electronic Ignition Module; Electronic Mixture Control Unit and Sensors; and Fuel Injection Sensors, Control Module and PC Board.

10. Fuel Delivery

Auxiliary Tank Switch; Fuel Distributor; Fuel Injection Pump; Fuel Injectors (Except For Contamination); Fuel Pump; Fuel Tanks; and Metal Fuel Lines.

11. Heating/Cooling

Bearings and Bushings; Coolant Recovery Unit; Electric Block Heater; Fan; Fan Clutch; Fan Motor and Controller Module; Fan Shroud; Heater Core; Heater Ducts; Radiator; and Water Pump.

12. Seals And Gaskets

Seals and Gaskets for all covered components.

13. Steering

All Internally Lubricated Parts of the Steering Gear Box; Control Valve and Cylinder; Cooler and Metal Cooler Lines; Drag Link; Idler Arm; Main and Intermediate Steering Column Shafts and Couplings; Pitman Arm; Power Cylinder; Power Steering Pump; Rack and Pinion Gear; Tie Rod and Tie Rod Ends; and Gear Housing*.

14. Suspension (Front and Rear)

Coil and Leaf Springs; Compressor; Kingpin and Bushing; Lines and Bags; Rubber Suspension Systems; Shafts, and Bushings; Spindle and Spindle Supports; Stabilizer Shaft; Linkage and Bushings; Steering Knuckles; Strut Bar and Bushing; Torsion Bars; Upper and Lower Ball Joints; Upper and Lower Control Arms; and Wheel Bearings.

15. Air Conditioning (Roof Mounted 110V or Central)

Accumulator; Bathroom Vent Fan; Blower Motor; Fans; Capacitors; Compressor; Condenser; Control Panel; Electronic Module and PC Boards; Evaporator; Expansion Valve; Fans; Heat Pump; Heat Strips; Pressure Cycling Switch; Receiver-Dryer; Relays; Switches; and Thermostat.

16. Auxiliary Powerplant/Generator

Factory-Installed or Factory Approved Dealer-Installed: All Internally Lubricated Parts of the Powerplant Engine; Cylinder Head; Gauges; Hydraulic Door; Interior Monitor/Control Panel; Inverter; PC Boards; Power Converter; Cylinder Block*; and Generator Assembly*.

17. Fresh Water System

Compressor; Connections and Faucets; Fittings; Traps; Water Lines; Water Pump; and Water Tank.

18. Heating System

Blower Motor; Burner Assembly; Connections; Fittings; Furnace Ignitor; Gas Valve; Heat Pump; Heat Strips; Reversing Valves; Thermocoupler; Thermostat; and PC Board.

19. LP Gas/Propane System

Automatic Shut-Off System; Fittings; Gas Lines Valves; Gauges; Mounting Brackets; Pigtales; and Regulators.

20. Power Step Coverage

Interior Monitor/Control Panel; Power Step Control Module; and Power Step Motor.

21. Range And Microwave

Burner Assembly; Burner Valves; Connections; Convection Oven; Fittings; Ignition Assembly and PC Board; Microwave Oven; Power Hood; Thermocoupler; and Thermostat.

22. Refrigerator (All Electric)

2- or 3-Way Cooling Unit; Burner Assembly; Control Panel; Ignitor; Connections; Fittings; PC Board; Thermocoupler; and Thermostat.

23. Waste System

Fittings and Connections; Gate Valves; Holding Tanks; Shower; Sink(s); and Toilet.

24. Water Heater

Burner Assembly Tank; Connections; Electronic Ignition Assembly; Fittings; Gas Valve; Heating Elements; Switches and PC Board; Thermocoupler; Thermostat; and Wiring Harness.

- *If damaged by the failure of an internally lubricated part.
- Fluids, lubricants, and freon will be covered only when required in conjunction with a covered repair.
- Sales tax will be paid when applicable.

